


User Manual


Handheld Anisakis Inspection Light

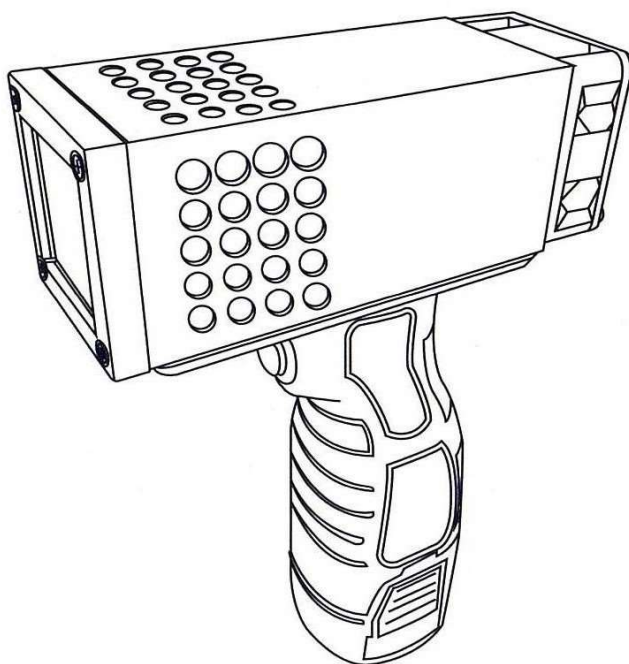

IMPORTANT: Please read this manual carefully before using the product.

Boxed products and features


Body with UV matrix	Battery	Battery charger	UV protection glasses
1 unit	1 unit	1 unit	1 unit

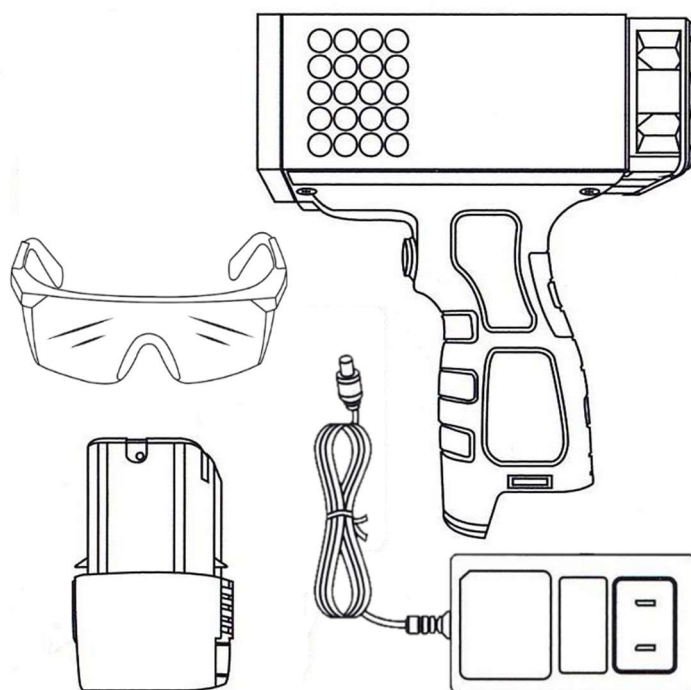

Key features of the Handheld Anisakis Inspection Light		
Dimensions	Electrical characteristics	Lighting characteristics
295x230x95 Container box Net weight: 1 KG	Battery voltage: 16.8V Intensity: 2,4A Battery capacity: 3400mA	Light-emitting area: 40x40mm Power: 80W
140x50x190mm UV Body	Charger voltage: 110-220V	Wavelength: 365nm

1. High-capacity, durable lithium battery pack capable of providing 1.5 hours of continuous operation.
2. Intelligent temperature control system: Operation stops if the temperature exceeds preset limits. The fans operate independently for improved heat dissipation.
3. The equipment's service life exceeds 20,000 hours of use.
4. Uniform and stable lighting.
5. High-power, low-temperature, and eco-friendly UV LED; produces no ozone.
6. Maximum instantaneous operating power; requires no prior preparation.
7. Automatic cut-off switch for operation during inclinations that are potentially hazardous to vision.

Product operating instructions

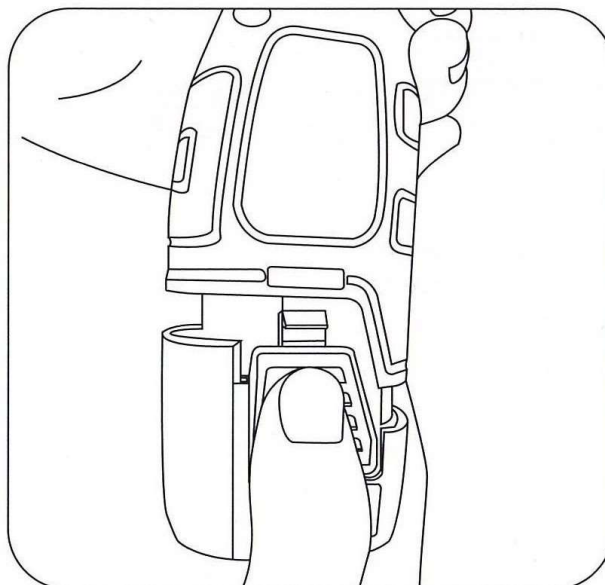

1. Install the lithium battery into the lighting handle: squeeze the latches on both sides of the battery, align the rails on both components, slide it to the end of the rail, and release the latches.
2. To illuminate an object, press and hold the button. Release the button to turn off the UV light.
3. During use, the temperature of the irradiated area will increase over time. Do not irradiate the same area for an extended period to avoid burns or damage to the object being illuminated.
4. This product comes with a charger. If the lighting efficiency is very low, please disconnect the battery and connect it to the charger; resume use once it is fully charged. To disconnect the battery: Press and hold the release tabs on both sides of the battery, then slide it out of the handle along the rails.
5. The product features a power cut-off system that activates upon dangerous tilting, ensuring greater user safety.

Precautions for use

1. The recommended duration for uninterrupted use of this product is 10 minutes.
2. Its use by children and minors is prohibited.
3. Do not charge the batteries with a charger that does not meet standard safety requirements.
4. Do not use batteries that do not meet standard safety requirements.
5. Do not use the product to irradiate skin and eyes.
6. Pay attention to moisture and dust accumulation on the equipment.
7. When the lamp reaches high temperatures, turn it off for a few minutes to dissipate the heat and prevent burns from excessive accumulated heat.

Warranty card

Product name		Manufacturer's Stamp
Product model		
Date of sale		
User name		
Contact number		
User address		

Maintenance clause

1. One-year free warranty from the date of product sale (excluding damage caused by the user).
2. A product will fall outside the scope of the warranty if the warranty period has expired, the warranty card or proof of purchase is missing, the product has been used for purposes other than those intended or outside the specified conditions, or if repairs have been performed by the user or damage has been caused by the user.
3. When the product is repaired by MAREXI, it will be sent back to the customer with the warranty card.
4. MAREXI reserves the right to modify and make the final interpretation of the warranty terms.

Legal notice and reminder

The intensity of the ultraviolet rays is very high. Do not expose your skin or eyes directly to them. It is normal for high intensity to generate heat. The UV emission area remains hot after use; be careful to avoid burns. Please turn off the light after each use.

MAREXI shall not be held liable for personal injury or property damage caused by the customer's improper use.